


## EJEMPLO INSTALACIÓN 5 PERSIANAS SISTEMA IO

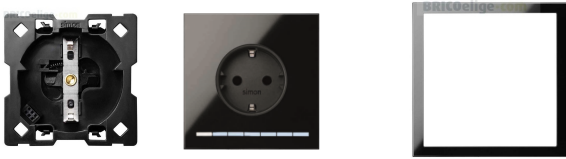

ENCHUFE IO  
10002432-0

TECLA HUB  
10003041-130 -138

MARCO  
10000610-130 -138



PERSIANAS IO  
10001358-0



PERSIANAS IO  
10001358-0



PERSIANAS IO  
10001358-0



PERSIANAS IO  
10001358-0



PERSIANAS IO  
10001358-0



TECLA PERSIANA IO  
10002080-130 -138



TECLA PERSIANA IO  
10002080-130 -138



TECLA PERSIANA IO  
10002080-130 -138



TECLA PERSIANA IO  
10002080-130 -138



TECLA PERSIANA IO  
10002080-130 -138




BASTIDOR  
10000910-0




BASTIDOR  
10000910-0




BASTIDOR  
10000910-0

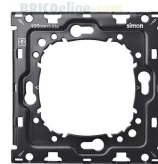


BASTIDOR  
10000910-0

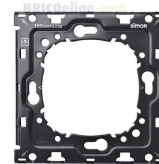

BASTIDOR  
10000910-0

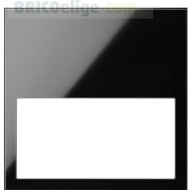

MARCO MÍNIMO  
10001610-130 -138

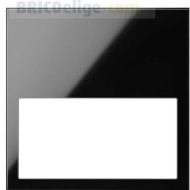

MARCO MÍNIMO  
10001610-130 -138



MARCO MÍNIMO  
10001610-130 -138




MARCO MÍNIMO  
10001610-130 -138



MARCO MÍNIMO  
10001610-130 -138

### ESQUEMA

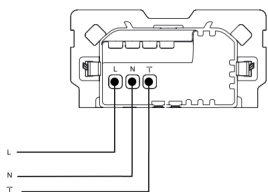

ENCHUFE IO

### PERSIANAS IO

